



PIXEL ENTERPRISE LIMITED

有线快门遥控器说明书

## RC-201

首先感谢您购买我公司产品，并阅读本说明书，为您的摄影增添精彩是我们不懈努力的动力。您可以通过本说明书而轻松掌握本产品的使用方法及注意事项。有线快门遥控器RC-201是带有锁定功能的遥控电缆，与全球多家品牌专业相机（仅限有对应插头的）接口连接，可以方便地进行快门线操作摄影。具体使用请对照相机的使用说明书。

### 注意事项

- 1、本产品属电子产品的附件，有可能因环境外界因素，而造成照相机不能拍摄或异常动作。这种情况的可能性非常小，不必惊慌。
- 2、长时间不使用遥控电缆线时，请将锁定快门退回锁定标志的相反方向，解除锁定。
- 3、遥控电缆线与照相机连接时，请勿拉扯导线。
- 4、请勿置于高温中，如阳光直射下的封闭汽车内、控制面板等高温地方。
- 5、请保持干燥，勿用湿手接触产品，亦不可将产品浸入水中或暴露雨中，否则可能无法正常使用。
- 6、请勿在易燃场合中使用，违反此警告可能引起爆炸或火灾。

### 安装方法

- 1、为了防止意想不到的意外，请先关闭照相机电源。
- 2、将照相机的遥控电缆插口盖打开，并将插头上的标志对准插座上的标志。（有些有螺纹插头的需按顺时针方向旋转，锁紧安装。从照相机上取下时，将锁定环按逆时针旋转，拔下插头。）
- 3、此时，您可以打开照相机电源，开始您的精彩拍摄。



### 使用方法

- 1、半按快门释放按钮，启动照相机自动对焦/测光系统，使被拍摄物聚焦，然后完全按下快门释放按钮，释放照相机快门进行拍照。
- 2、锁定快门（照相机设定为连拍或BULB），完全按下快门释放按钮并向前推动，锁定照相机进行连拍或长时间曝光。
- 3、解除锁定，将快门释放按钮按下并向后推动，松开快门按钮，恢复到原来位置。

### 规格

 
类型：钢缆式快门遥控开关

释放：对焦和拍摄两种按钮，锁定按钮可以连续拍摄和长时间曝光

线长：120CM

体积：95.5mm×29.4 mm×20.3 mm

重量：55克

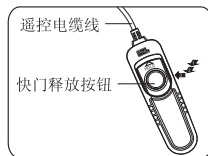

制造商：品色（香港）企业有限公司

地址：香港九龙荔枝角青山道704号合兴工业大厦

电话：(852) 2384-1188

网址：www.pixelhk.com.cn



PSM102 V20.03



PIXEL ENTERPRISE LIMITED

Cable shutter remote control Instruction



# RC-201

Thank you so much for purchasing PIXEL product and read this instruction; Our unremitting strive power is for increase your interested of photography. You can easily to understand “how to use” and “condition” from this instruction manual. Remote control RC-201 is having the control shutter release function, just connect to all famous brand professional camera (which have the shutter socket) shutter plug, then easily to use the shutter release to take a picture. For more information, please read the camera instruction manual.

## Caution

1. This is an electron product accessory; some of the environment causes will be effected the working. However this is hardly ever to get this situation, don't worry!
2. Remove the continuous mode before store this product for long time.
3. When the remote control is connected to camera, please do not pull and drag the cable.
4. Please do not store this product into high temperature location, such as car internal or control panel these high temperature area.
5. Please keep it dry and do not get wet; also cannot put in water or use under raining day.
6. Please do not use it in the presence of flammable or gas, it could cause an explosion or fire.

## Installation

1. To prevent any unexpected matter, please turn off the camera power.
2. Open the shutter socket cover from camera, and plug in the remote control plug to the correct direction. (some plugs are the spiral plug, roll the lock to clockwise and tight it. When take off from camera, just roll the lock to anti-clockwise and release it.)
3. Now turn on the camera power, then start to take the wonderful picture.

## Directions

1. Half press the release button, to start the camera auto-focus, let focus on the main point; then fully press the release button to take a picture.
2. Locking mode, (Please set the camera to continuous or BULB mode). Fully press the release button and lock the button. It's locked the camera to start the continuous shoot or long exposure.
3. Remove locking, let pull down the lock, then release the button.

## Specification

 
 
Style: Cable style shutter release control

Mode: 2 ways button for focus and shooting, and lock the button for continuous shooting and long exposure.

Cable length: 120cm

Volume: 95.5mm(L)X29.4mm(W)X20.3mm(H)

Weight: 55 g

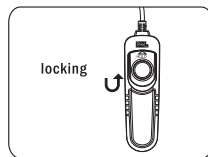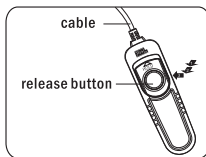

[www.pixelhk.com](http://www.pixelhk.com)

Add: Rm A07, 4/F, Hop Hing Industrial Building, 704 Castle Peak Road,  
Lai Chi Kok, Kowloon, Hong Kong



PSM102 V20.03